



Assembly Instructions:

- Order 2X 12 V Fans, Part# 210-0015
- Install 2X Fans with filter.
- Run extension cable from fans till opening on cabinet back.
- Use cable cover and ziptie to conseal.
- Leave 2 feet of cable from hole opening.

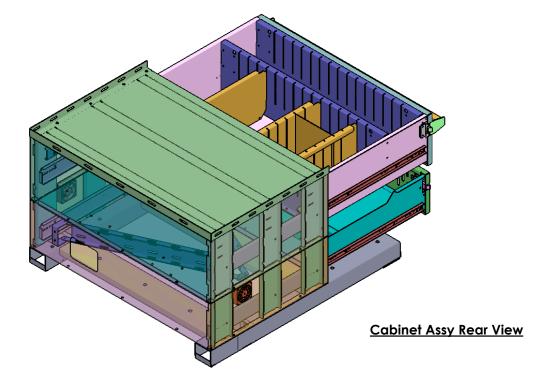

REV.	DESCRIPTION	NCR#	DCR#	BY	DATE	APPROVED

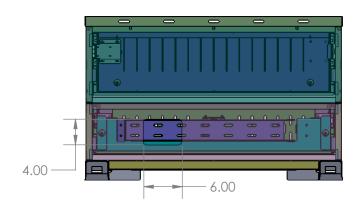

DRAWN	NAME VM	DATE 05July17	Den ELECTRONICS CO. 110	DANDR-ANSI-A REV2 APRIL 1,2009	SIZE
CHECKED	AD	ord Explorer Dual Drawe	er Cabinet\		
THE INFORMATION CONTAINED WITHIN THIS DRAWING IS PROPRIETARY AND CONFIDENTIAL. AND IS THE SOLE PROPERTY OF DandR ELECTRONICS CO, LTD. IT MAY NOT BE REPRODUCED AT WHOLE OR IN PART WITHOUT THE WRITTEN PERMISSION OF DandR			Ford Explorer Due Electronic Storag		t
			934-0814A		
	CTRONICS		USED ON:	SHEET	2 OF 2
Midnight Black Wrinkle			MATERIAL ALUM/CRS	REV.	0